

Restoration&Moisture&Ventilation



SPARE PARTS LIST
Sentinel HD55P

For the version without covering,
please contact: sales@alorair.com

47	Square Wire Buckle	Plastic part	1
46	A1-A6 plug terminals	Electronic part	1
45	Control panel sticker	Plastic part	1
44	Ethernet cable terminal	Electronic part	1
43	Right side plate	Hardware	1
42	Operation screen cover	Hardware	1
41	Operation screen	Electronic part	1
40	Fan motor	Electronic part	1
39	Air exhaust pipe	Hardware	1
38	Compactors	Electronic part	1
37	Insulation sleeve	Plastic part	1
36	Bolt	Hardware	3
35	Refrigeration component	Hardware	1
34	Adjustable foot mats	Plastic part	4
33	Drainpipe	Hardware	1
32	Drainage copper adapter	Hardware	1
31	Temperature and humidity sensor holder	Plastic part	1
30	Temperature and humidity sensors	Electronic part	1
29	Temperature and humidity sensor box	Plastic part	1
28	Air supply plate	Hardware	1
27	Duct plate	Hardware	1
26	Base plate	Hardware	1
25	Water tray	Plastic part	1
24	Condenser	Hardware	1
23	Evaporator	Hardware	1
22	Perimeter sealing sponge	Plastic part	1
21	Air intake panel assembly	Hardware	1
20	Merv-1 filter	\	1
19	Handle	Plastic part	1
18	Fan bracket	Hardware	1
17	Air guide enclose	Hardware	1
16	Top cover	Hardware	1
15	DC water pump small float switch	Electronic part	1
14	Water pump filter	Plastic part	1
13	Electrical box	Hardware	1
12	Float fixing plater	Hardware	1
11	Water pump fixed part	Plastic part	1
10	Sealing plate	Hardware	1
9	Capacitor	Electronic part	1
8	Capacitor	Electronic part	1
7	Integrated motherboard	Electronic part	1
6	Capacitor clip	Plastic part	1
5	Water pump	Electronic part	1
4	Water pump silicone guard	Plastic part	1
3	Water pump cover plate	Plastic part	1
2	Drain plug	Plastic part	1
1	Left side plate	Hardware	1
No.	Name	Material	Quantity