



SPARE PARTS LIST
GF600A

No.	Name	Material	Quantity
1	Intake hood right	PP	1
2	Foot pads	TPV	2
3	Housing right	PP	1
4	Cross self tapping screw housing	Carbon steel	27
5	Reverse tooth nuts	Stainless steel	1
6	Spring washer	\	1
7	Gasket	Zinc plating	1
8	Wind wheel	\	1
9	Motor ground wire setting screws	\	1
10	Motor	\	1
11	Housing left	PP	1
12	Coils	TPE	1
13	Wire clamp board	ABS	1
14	Intake hood right	PP	1
15	Connect the external outlet	\	2
16	Power switch	\	1
17	Capacitors	\	1
18	Switch	\	1
19	Knobs	ABS	1
20	Panel	ABS	1
21	Outlet air mesh cover	PP	1
22	Front foot pad left	TPV	1
23	Back foot pad left	TPV	1
24	Line baffle	ABS	1
25	Bracket	A3 steel	2
26	Front foot pad right	TPV	1
27	Back foot pad right	TPV	1
28	Cross self tapping screw foot pads	\	4
29	Power cable	\	1

